


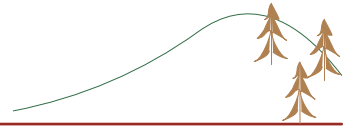

chalet almzeit



am kreischberg

Technical Information

Dear Guests,
Welcome to the Chalet Almzeit!

To make your stay as comfortable as possible, you will find important information on how to use the many features of this chalet in this book. If you read through it, you will be able to enjoy the fireplace, the sauna or the outdoor and indoor whirlpools right from the start. You will also find information on the lighting controls, so you can set the mood exactly as you like. Have fun and enjoy your stay!
In case you have any questions, please contact the Alps Resort team. They will take care of you!

Heating the Chalet

Using the Gas Fireplace

Light Switches - Living Room / Kitchen

Light Switches - Wellness Room

Using the Sauna

Using the Indoor Whirlpool

Using the Outdoor Whirlpool - Page 1

Using the Outdoor Whirlpool - Page 2

Using the Umbrellas

Using the Weber Gas Grill

You can find further information about sports, facilities and other attractions in the area on our website.

www.chalet-almzeit.com



Heating the Chalet

The Chalet has three different heat sources.

Ground floor:

> Floor heating (gas)

The touch-screen control panel is located near the staircase on the ground floor.

- ① Current Temperature display
- ② Back button
- ③ Menu button
- ④ Confirm button
- ⑤ Adjustment scale



How to use:

- > Touch the menu button ③.
- > Change the target temperature with the adjustment scale ⑤.
- > Press sthe confirm button ④.
- > Press the back button ② to return to the main screen.

Note:

- > Please do not make any other changes on the control panel! Thank you!

> Gas-Fireplace

Please refer to the detailed guide on the next page.

Top floor:

> Electric heaters

Every room on this floor has an electric heater.

Note:


- > The electric heaters get hot very quickly.
 - > Never place towels, clothes, gloves etc. on the heater: risk of fire!
 - > When you leave the chalet, please ensure all the heaters are turned off!
- Thank you!



Using the Gas Fireplace

Turning the fireplace on:

> Turn the left dial to the spark symbol.

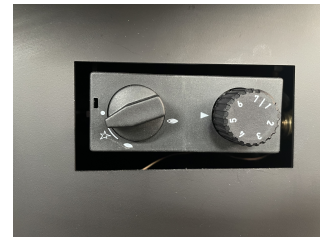

> Press the left dial inward and continue turning it counterclockwise, while pressed in, to the middle flame symbol. (This lights the fireplace; the flame can be seen in the left side of the fireplace, under the "wood"). Hold for 2 - 3 seconds, then let go. The fire will continue burning.



> Turn the left dial further counterclockwise to the flame symbol on the right. Use the right dial to set the desired flame strength.



Turning the fireplace off:

- > Turn the left dial clockwise to the middle flame symbol.
- > Press the dial inward until you hear a click sound.
- > After the click sound, continue turning the dial clockwise. The fire will stop burning.

Note:

> Ensure the fireplace is turned off at night and when leaving the chalet!


Thank you!



Light Switches - Living Room / Kitchen


Main switches near the living room entrance:

- 1 = Kitchen ceiling lights
- 2 = Living room ceiling LED strip
- 3 = Dining table lights
- 4 = Dining table lamp in the corner
- 5 = Living room lamp
- 6 = Living room wall lighting
- 7 = Ceiling spotlights (dimmable)
- 8 = Couch LED strip (dimmable)

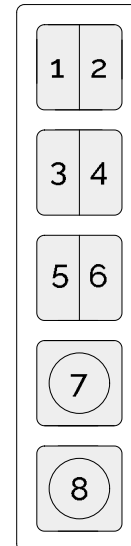

Switches on the kitchen wall (next to the power outlets):

- 1 = Spotlights in the shelves
- 2 = Kitchen stovetop lamps

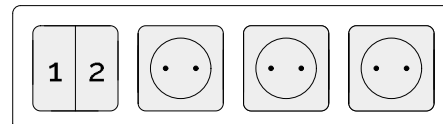

Lighting under the cabinets (above the coffee machine):

Wave your hand past the sensor on the back of the left light panel.

Staircase and top floor hallway lighting:

These lights are controlled by motion sensor!

Outdoor terrace lighting:

Switches are located inside, next to the outside door to the kitchen and next to the outside door to the dining table.


Note:

> Ensure that the lights are turned off at night and when leaving the chalet.

Thank you!



chalet almzeit

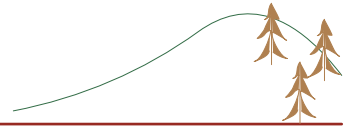

am kreischberg

Light Switches - Wellness Room

1 = Ceiling light


2 = "Starry sky" lights (switch has a 2 second delay)

3 = Ceiling LED strip

4 = Wall lights

5 = Mirror lights


6 = Under-cabinet lighting

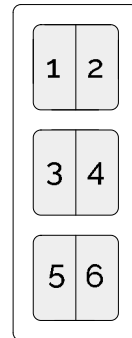

Note:


> Ensure that the lights are turned off at night and when leaving the chalet.

Thank you!

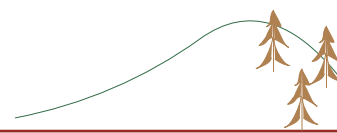


Using the Sauna

- ① Power button
- ② Down adjustment button
- ③ Up adjustment button
- ④ Temperature adjustment button
- ⑤ Lighting power and adjustment button
- ⑥ Humidity adjustment button
- ⑦ Fan speed adjustment button
- ⑧ Temperature display
- ⑨ Humidity display

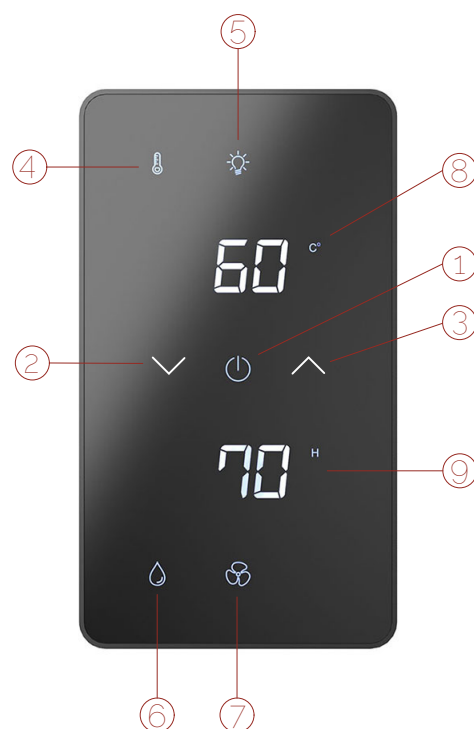

Use:

- > When the control panel is in stand-by mode, only the power button ① is lit.
- > Press and hold the power button ① for 2 seconds; all other lights on the control panel then turn on.
- > Set each of the functions to the desired setting by first selecting the function (i.e. temperature ④, lighting ⑤, humidity ⑥, or fan speed ⑦) and then pressing the up ③ or down ② button accordingly.
- > To confirm each selection, press the same function button again.
- > When finished with the sauna, press and hold the power button ① for 2 seconds. All other lights on the control panel turn off.

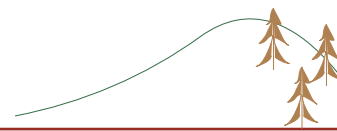

Using the Indoor Whirlpool

Ⓐ Power / function switch

Ⓑ Left button

Ⓒ Right button

Ⓓ Confirm button




Use:

- > Hold the power / function button Ⓐ for 2 seconds. The control system then turns on.
- > Scroll through the functions with left Ⓑ and right Ⓒ buttons and select the desired function symbol:
 - Lighting
 - Ozone
 - Air jets
 - Water jets
 - Radio
 - Heating
- > Press the confirm button Ⓓ to active / deactivate the selected feature.
- > Note: When there is no input to the control panel for three minutes, the buttons will be locked and the word LOCK will be displayed. Press the power / function button Ⓐ for five seconds to unlock the panel.



Using the Outdoor Whirlpool - Page 1

- Ⓐ Menu button (you will not need this!)
- Ⓑ LCD display
- Ⓒ Raise the water temperature
- Ⓓ Lower the water temperature
- Ⓔ Activate / deactivate pump 1
- Ⓕ Activate / deactivate pump 2
- Ⓖ Lighting

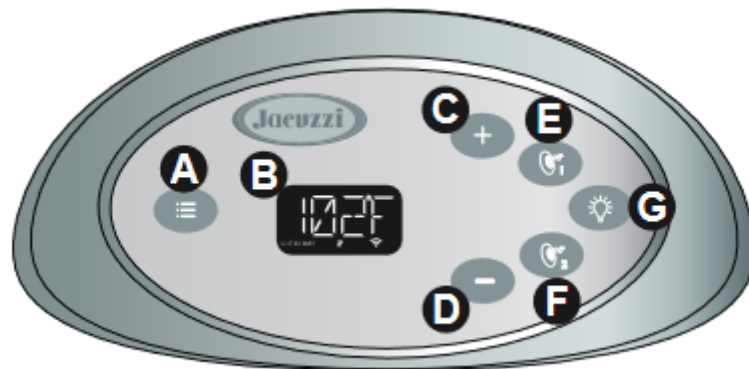

Menu button (A):

> Please do not make any adjustments with this button!

Setting the water temperature:

> Set the desired water temperature with buttons Ⓒ and Ⓓ. The temperature can be set to a value between 18°C and 40°C (ca. 64°F and 104°F).



Using the Outdoor Whirlpool - Page 2

Activating the pumps:

- > Use the buttons **E** and **F** to activate the pumps. Press each button once to turn those pumps on to the first power level, and press again to turn them on to the second power level.
- > Press the button **E** and/or **F** once more to turn those pumps off.
- > Note: The pumps automatically turn off after 20 minutes. If desired, simply follow the above step to turn them back on.

Lighting:

- > The LED system has seven static colors and three changing color modes.
- > Turn the lights on by pressing **G**.
- > Press the button **G** multiple times to cycle through the various modes.
- > Note: The lights turn off automatically after 2 hours. If desired, simply following the above steps to turn them back on.

Jets:


- > Regardless of whether the pumps are turned on with **E** and **F**, each individual jet can be opened / closed and adjusted by turning them.
- > Some jets are controlled by dials on the sides of the whirlpool. These dials adjust the direction of those water jets.



Note:

- > When leaving the whirlpool, make sure to put the cover back on and secure the four buckles on the sides!

Thank you!

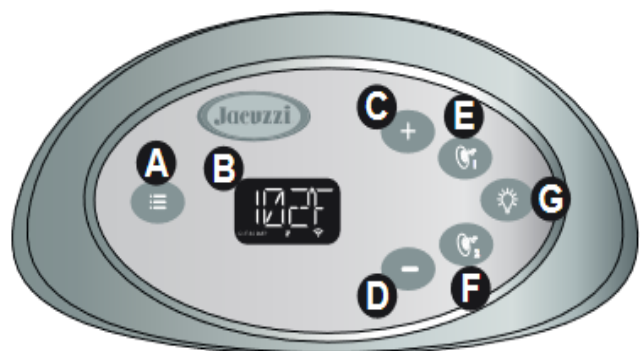



Using the Umbrellas

Opening:

- > Remove the protective cover.
- > Remove the strap securing the umbrella.
- > Loosen the handwheel (towards the top of the umbrella pole) by turning it to the left.
- > Turn the crank (below the handwheel on the pole) clockwise.



Handwheel



Crank

- > While turning the crank, move the handwheel up to adjust the angle of the umbrella as desired, and secure it in position by turning the handwheel to the right.
- > Use the foot pedal to turn the umbrella in the desired direction.

Closing:

- > Loosen the handwheel and pull it down.
- > Turn the crank counterclockwise.
- > Tighten the handwheel.
- > Fix the strap around the umbrella (including the mast).
- > Put the protective cover over the umbrella.

Note:

- > When leaving the chalet, ensure the umbrellas are closed!
- > In case of storm or rain, ensure the umbrellas are closed!
- > If an umbrella has gotten wet, please allow it to dry before putting the protective cover on!




Thank you!



Using the Weber Gas Grill

Pre-heating / cleaning:

- > Step A: Remove the protective cover and open the grill.
- > Step B: Turn all dials to off position (the 0 symbol top center) by pressing the dials inward and turning clockwise.
- > Open the gas line: Turn the gas tank valve counterclockwise or adjust the lever to the open position (depending on the type of gas tank).
- > Step C: Press the dial for burner number 1 (the one farthest left) inward and turn it 1/4 counterclockwise to the flame symbol on the left side of the dial.
- > Step D: Press and hold the ignition button. You will hear a click. Check if burner 1 is now lit.
- > Step E: If burner 1 is lit, you can now proceed to turn on burners 2 and 3 by adjusting their dials.
- > Step F: Close the grill and allow the grill to preheat to 260° C (500°F). The grill can be used now (see Grilling below) or cleaned (continue to steps G and H and see Cleaning below).
- > Step G: Press all burner dials inward and turn them to the Off position (top center).
- > Step H: Clean the grill's cooking surface with the steel brush.

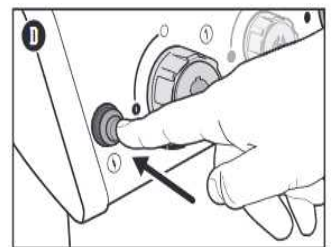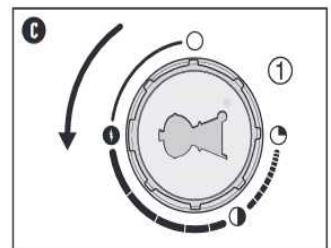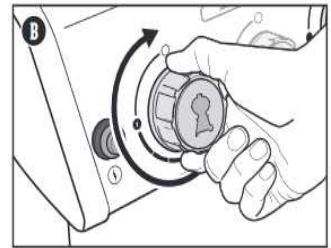

Grilling:

- > Start the grill following Steps A - D above.
- > Set the burners to the desired heat level. For full heat set the dial to the left, 1/2 heat to the bottom, and 1/4 heat to the right.
- > If needed, you can start the side burner in the same way.
- > When finished grilling, follow Step G to turn off all burners. **Alos make sure to close the gas tank!**
- > **Once the grill has fully cooled (and only then!) put the cover back on!**

Cleaning:

- > Check the grease trap before grilling and, if necessary, clean it or replace the single-use drip tray with a new one.

